


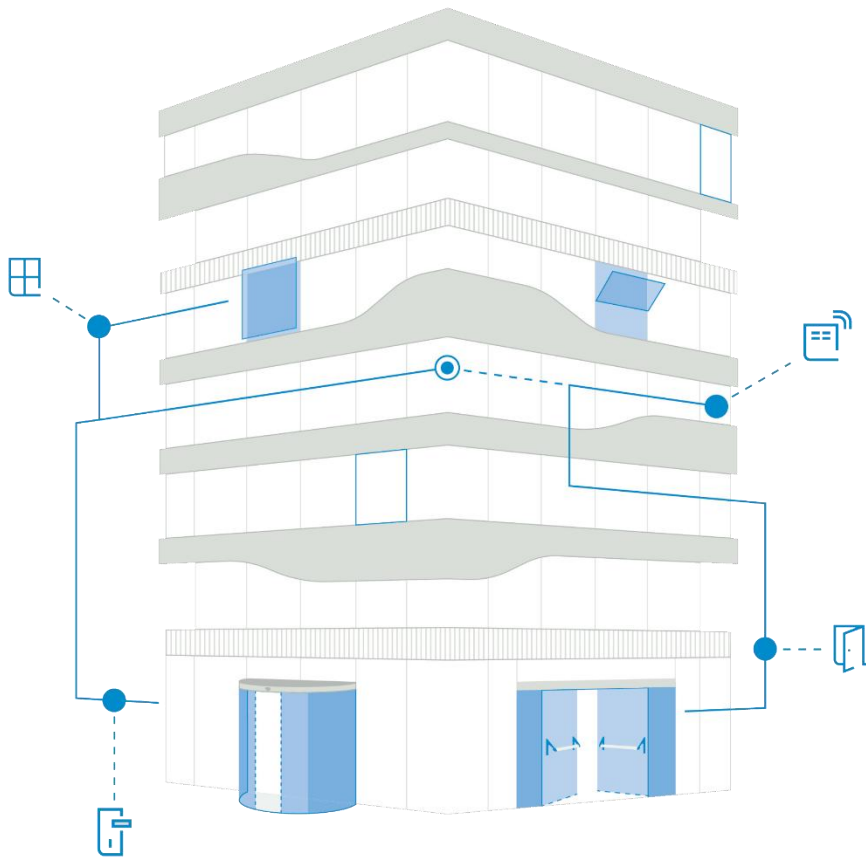

myGEZE Control

Building automation and control system

Overview

- ▶ OPC UA
- ▶ OPC data sets
- ▶ Module types

EN User manual

213697-01

04/2026



Contents

1	Introduction	4
1.1	Symbols and illustrations	4
1.2	Reference documents	4
1.3	OPC Unified Architecture: OPC UA	5
1.4	OPC UA tools used	6
1.5	Activated ports	6
1.6	Configured users	7
1.7	Certificates	7
2	Configuration with UaExpert	8
2.1	Connect to the myGEZE OPC UA server	8
2.2	Entries from GDS server	9
2.3	Register GDS	10
2.4	Delete GDS	11
2.5	Set update strategy	12
2.6	Complete direct update	13
2.7	Edit the TcUaServerConfig.xml file	13
2.7.1	Open file access	14
2.7.2	Read file	15
2.7.3	Close file	15
2.7.4	Edit file with Editor	17
2.8	Write the edited file back to the controller	17
2.8.1	Open file access	17
2.8.2	Write file	18
2.8.3	Close file	19
2.9	Restart the OPC UA Server	19
3	Module types	20
3.1	Basic design of the object structures	21
3.2	Open count	22
4	Overview of module-specific data points	23
4.1	Server system	23
4.2	TZ320	24
4.3	DCU	26
4.4	DCU+TZ320	29
4.5	Door	31
4.6	MBZ	33

4.6.1	MBZ.PM	33
4.6.2	MBZ.CM/SM.....	34
4.6.3	MBZ.DM	35
4.6.4	MBZ.WM.....	36
4.7	IQBOX KNX.....	37
4.8	KNX Common	38
4.9	DI/DO	39
4.10	HOLD hold-open system.....	40
5	Compatible products.....	41
6	List of figures.....	42

1 Introduction

1.1 Symbols and illustrations

Warning notices

In these instructions, warning notices are used to warn against material damage and injuries.

- ▶ Always read and follow these warnings.
- ▶ Observe all the measures that are marked with the warning symbol and signal word.

Warning symbol	Warning	Meaning
	DANGER	Danger to persons. Non-compliance will result in death or serious injuries.
	WARNING	Danger to persons. Non-compliance can result in death or serious injuries.
	CAUTION	Danger to persons. Non-compliance can result in minor injuries.

Further symbols and means of representation

Important information and technical notes are highlighted to explain correct operation.

Symbol	Meaning
	means "important note" Information to prevent property damage, to understand or optimise the operation sequences.
	means "additional information"

1.2 Reference documents

Type	Name	Material no.
User manual	myGEZE Control	207492
User manual	myGEZE Control – Module types, Compatible products	207846

1.3 OPC Unified Architecture: OPC UA

OPC UA stands for the industrial communication standard Open Platform Communications Unified Architecture. It can be used to provide data from machines and devices made by different manufacturers in a standardised format.

OPC UA helps to collect device data and make it accessible to other applications, such as building management systems or physical security information management systems.



myGEZE Control is an OPC server that provides data from networked GEZE product systems. A licence option is required in the system to use this function.

The OPC UA standard uses a security concept.

Encrypted communication	Communication between the OPC server and the OPC client is encrypted.
Authentication	Support for client/server certificates to protect the communication connection.
Admission control on the user level	Definition of user-/group-based access rules at the namespace and node level.

1.4 OPC UA tools used

This document uses the tool UaExpert from Unified Automation GmbH (free version available) to display the node sets and address spaces.

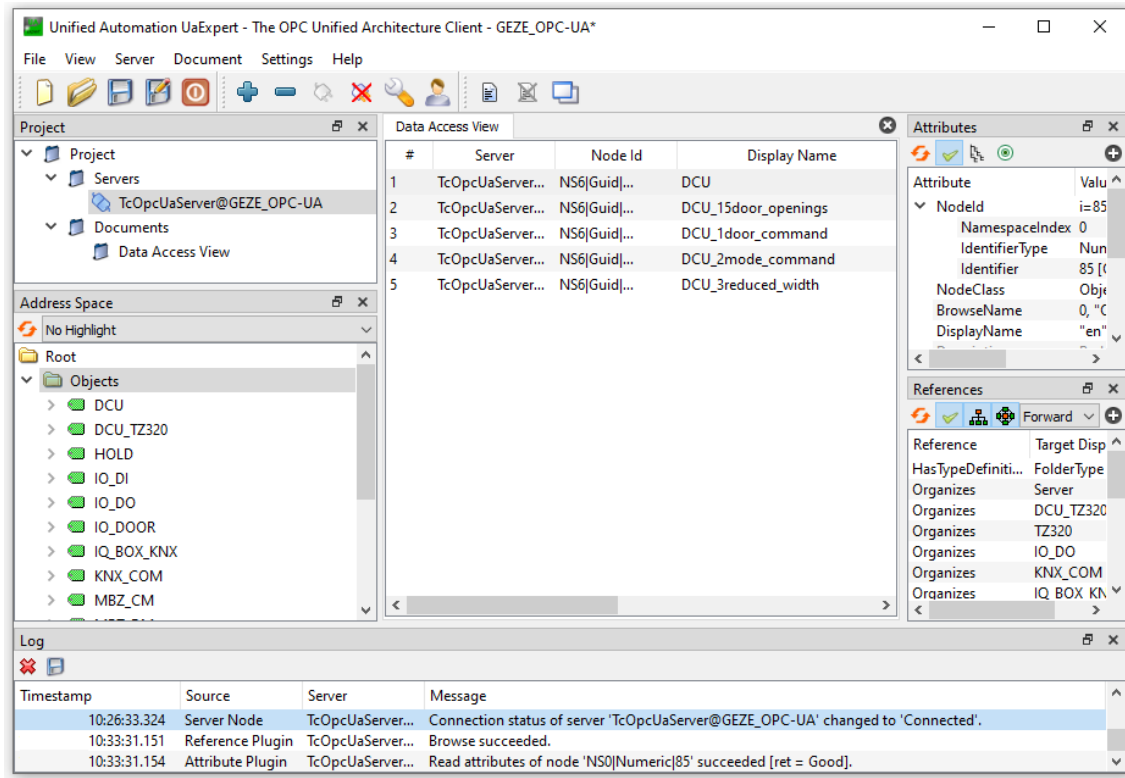


Fig. 1: Sample graphic UA Expert

1.5 Activated ports

myGEZE Control has a firewall. Only the ports necessary for communication are activated in this firewall. The following TCP ports are available by default for OPC connections:

- ▶ TCP 4840, 4841, 4885, 49320, 4897

Additional ports can be activated.



- ▶ If a connection between the systems is established using the hostname and the DNS (Dynamic Name Service) function, other ports may be used for this purpose. This would cause the firewall to block this connection. Connecting directly using the IP address is therefore recommended.

1.6 Configured users

The myGEZE Control OPC UA server is accessed via user accounts. Two users are configured by default for this purpose.

User	Authorisation	Password
GEZE	▶ Access to data from all configured and networked devices	1863
OPC	▶ Access to all configurations of the OPC UA server. ▶ Authorisation to restart the OPC UA server. ▶ Management of certificates, GDS connections. ▶ This user has NO access to configured and networked devices.	2030



GEZE recommends customising these passwords.

1.7 Certificates

To simplify configuration and initial commissioning, the myGEZE Control OPC UA Server is set by default to trust all certificates.

Setting: 'TrustAllClientCertificates==True'

This means that an OPC client can use its certificate to connect to the OPC server without further required steps.

The certificate files exchanged in this process are not stored in the OPC server.



- ▶ To ensure a secure connection between the systems, the setting 'TrustAllClientCertificates==True' should not be retained.

There are various ways of handling customer certificates. In some cases, they can be handled directly via the customer's tool, which the administration provides.

The myGEZE Control OPC UA server offers the option of handling them via OPC.

These options can be used to change settings and load certificates into the controller system. It is possible to link to the URL of the customer's GDS pull. This means that certificates managed and provided by GDS are automatically loaded into the controller system.



- ▶ These settings can only be changed with the OPC administrative account.
- ▶ Incorrect configurations can make it impossible to access the controller. In this case, please contact GEZE Support.

The following section explains the configuration options available using the 'UaExpert' tool from Unified Automation GmbH.

2 Configuration with UaExpert

2.1 Connect to the myGEZE OPC UA server

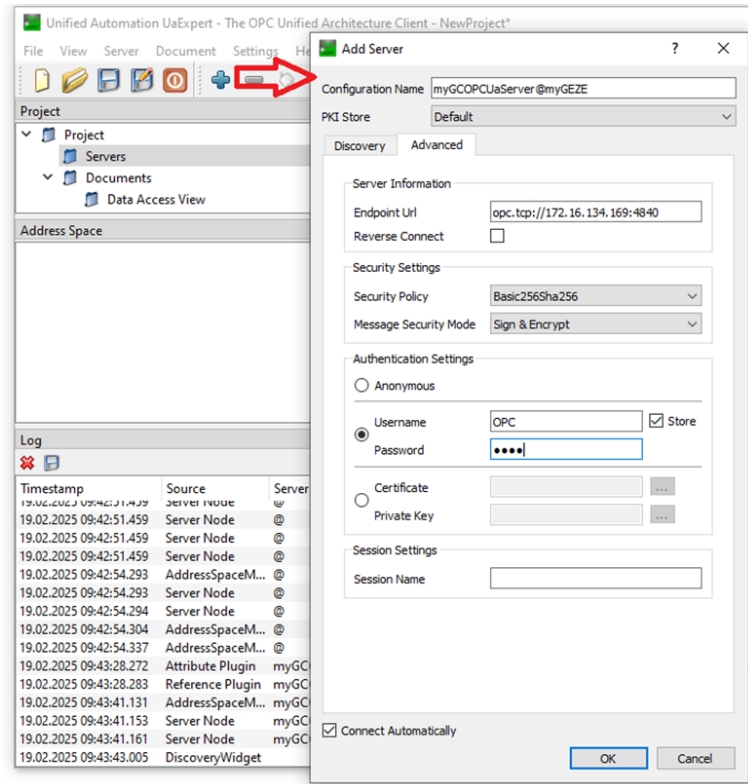


Fig. 2: Establishing a connection

- ▶ Use '+' to add a new connection.
- ▶ Configuration Name: Enter any name
- ▶ PKI Store: Default
- ▶ Advanced
- ▶ Endpoint Url: opc.tcp://IP-address:Enter port
- ▶ Security Policy: Basis256Sha256
- ▶ Message Sec. Mode: Sign & Encrypt
- ▶ Username: OPC
- ▶ Password: Enter password
- ▶ Confirm the connection with 'OK'.

If the connection is established successfully, UA Expert will retrieve the data from the OPC UA server.

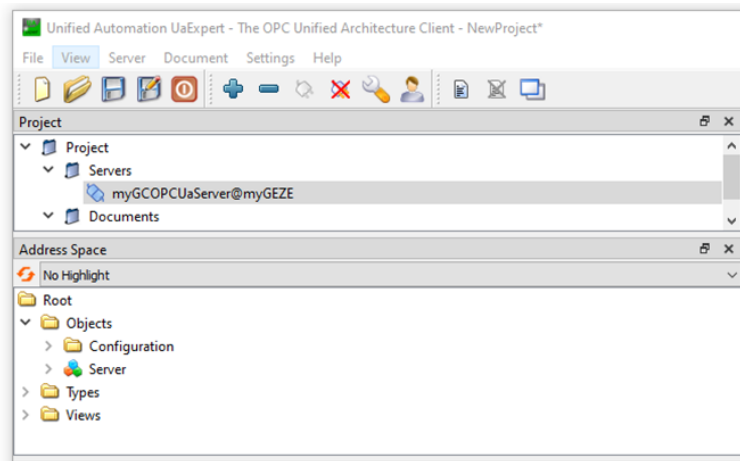


Fig. 3: OPC UA data

The areas for configuration are visible in the project structure according to the user's OPC.

2.2 Entries from GDS server

In the project structure, open the 'Configuration'/'GDSPull' section.

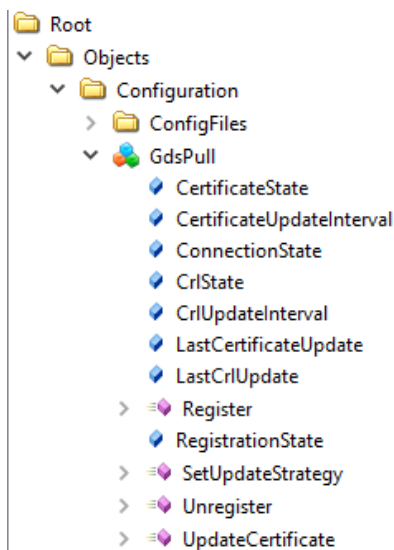


Fig. 4: GdsPull

GDS systems can be registered and deleted, and the update strategy can be defined here.

2.3 Register GDS

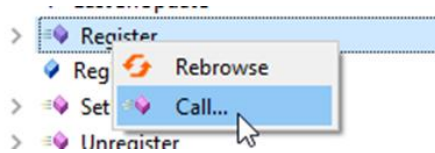


Fig. 5: Call Register

Select the "Call" function in the context menu.

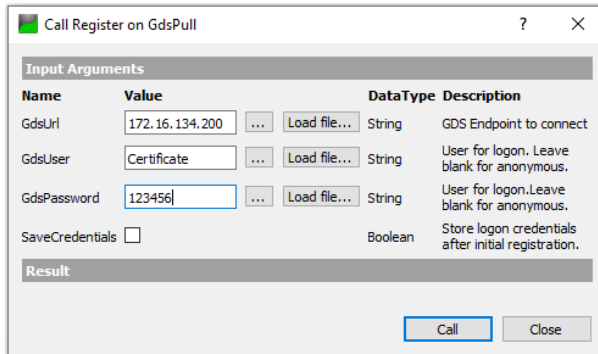


Fig. 6: Call Register on GdsPull

- ▶ GdsUrl: Enter the GDS IP address or URL
- ▶ GdsUser: Enter user
- ▶ GdsPassword: Enter password
- ▶ Start the function by selecting Call.
- ▶ After the function is executed successfully, a confirmation appears under Result.

2.4 Delete GDS

This function can be used to disconnect a GDS connection.



- ▶ Do not perform this function at this point.
- ▶ This function is only mentioned here for the sake of providing complete documentation.
- ▶ Only use this function if you explicitly want to disconnect the GDS connection and GDS is unable to do so itself.

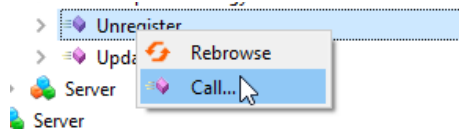


Fig. 7: Call Unregister

Select the "Call" function in the context menu.

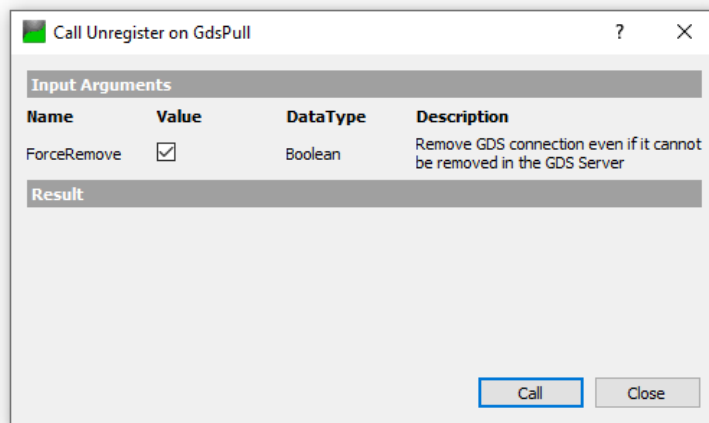


Fig. 8: Call Unregister on GdsPull

- ▶ Select Force Remove.
- ▶ Start the function by selecting Call.
- ▶ After the function is executed successfully, a confirmation appears under Result.

2.5 Set update strategy

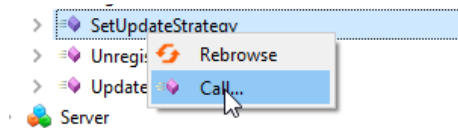


Fig. 9: Call SetUpdateStrategy

Select the "Call" function in the context menu.

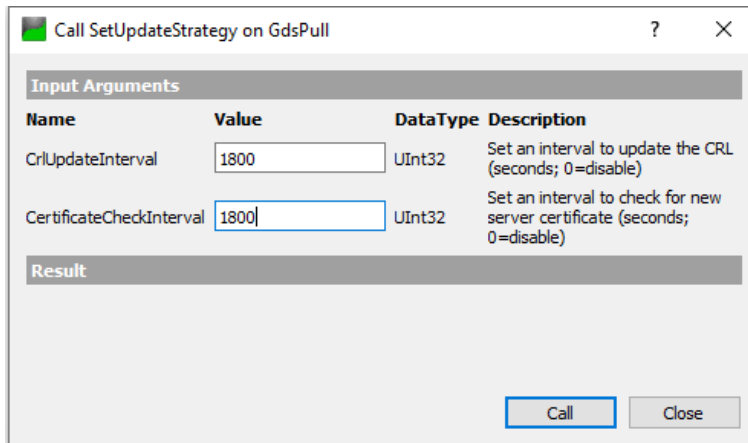


Fig. 10: Call SetUpdateStrategy on GdsPull

- ▶ Enter the intervals for the update and CertCheck.
- ▶ Start the function by selecting Call.
- ▶ After the function is executed successfully, a confirmation appears under Result.

2.6 Complete direct update

 


Fig. 11: Call Update

Select the "Call" function in the context menu.

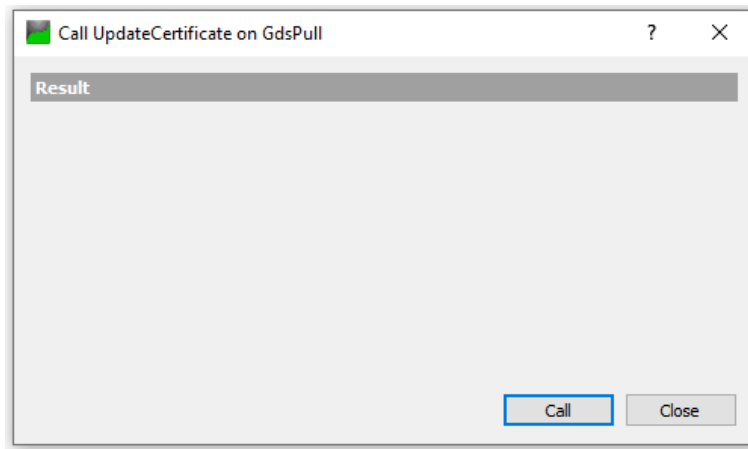


Fig. 12: Call Update on GdsPull

- ▶ Start the function by selecting Call.
- ▶ After the function is executed successfully, a confirmation appears under Result.



▶ It is essential to execute this function at this point in the configuration of a GDS. Otherwise, OPC UA access to the control may no longer be possible after changing the access to valid certificates (the next step described here). In this case, it will only be possible to restore this access through a GEZE administrator account.

2.7 Edit the TcUaServerConfig.xml file

If the registration on the GDS was successful and the certificate was updated for the first time, the connection to the myGEZE Control OPC UA server can only be switched to certificate-based communication. This setting must be changed in the TcUaServerConfig.xml file.

The following steps explain how to read this file from the controller, edit it and write it back to the controller using UaExpert.

2.7.1 Open file access

In the context menu, call up the following function in the Call context menu in the path Objects/Configuration/ConfigFiles/TcUaServerConfig.xml/Open:

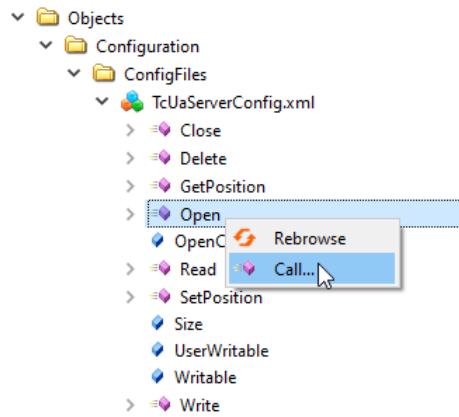


Fig. 13: Open file access

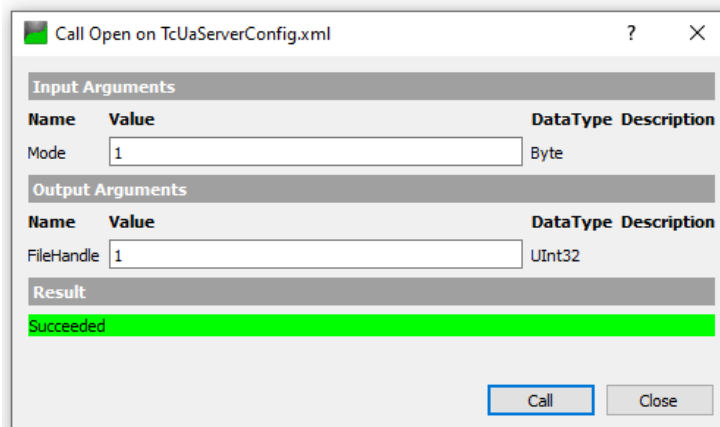


Fig. 14: Call Open

This function is used to open file access to the file.

- ▶ Open file access for reading.
- ▶ Mode: 1 Read
- ▶ File handle: DO NOT enter anything!
- ▶ Press Call



The program returns a file handle after the function has been executed.

- ▶ Remember this file handle for the next steps!

2.7.2 Read file

In the Call context menu of the Objects/Configuration/ConfigFiles/TcUaServerConfig.xml/Read path, call up the following function:

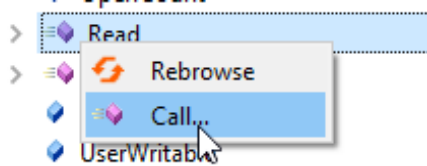


Fig. 15: Open Read

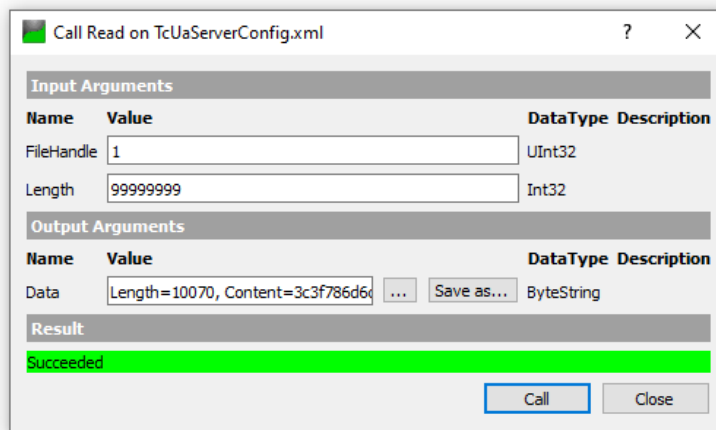


Fig. 16: Call Read

- ▶ File handle: Enter data from the Open step
- ▶ Length: 99999999 (just to ensure the entire file is loaded in full)
- ▶ Press Call

A display with the length and coded content appears under Result/Data. Click on Save as... and save the file wherever you choose.

2.7.3 Close file

In the Objects/Configuration/ConfigFiles/TcUaServerConfig.xml/Close path, call up the following function in the Call context menu:

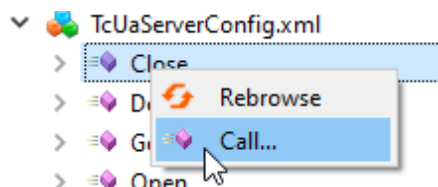


Fig. 17: Open Close

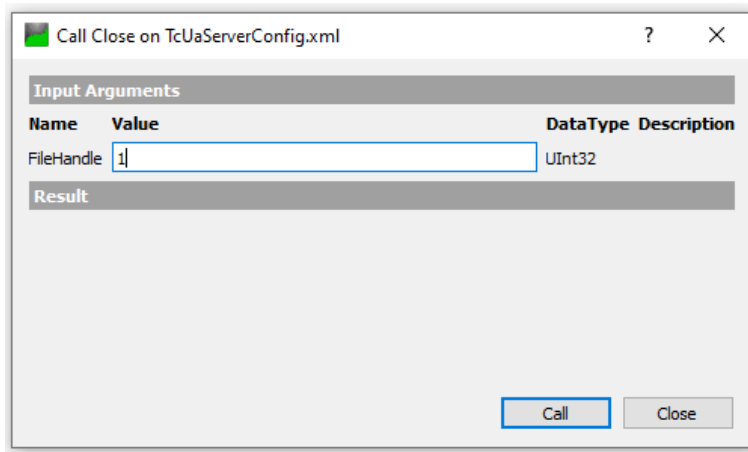


Fig. 18: Call Close

- ▶ File handle: Enter data from the Open step
- ▶ Click on the Call button to close the file again.



Closing the file is extremely important. If the file is not closed as described, it may be destroyed when you write to it later.

2.7.4 Edit file with Editor

Open the file transferred to the computer system for editing with a text editor. To make the file easier to read, we recommend using an editor that can break down the structures of an XML file. Find the following line in the file:

```
<AutomaticallyTrustAllClientCertificates>false</AutomaticallyTrustAllClientCertificates>
```

 


Fig. 19: XML illustration

This is how the decision is made on how to handle connections.

True.	All certificates are accepted. A client can create a certificate itself and exchange it with the server. The connection is made.
False	Only certificates that have been explicitly created and authorised for this connection will be accepted. For example, those received through a connection to a GDS system.

- ▶ Change the parameter to '**False**' if you only want to allow qualified connections.
- ▶ Save file



Do not change format and structure when saving.
Loading a faulty file into the controller will cause the myGEZE Control OPC UA server to malfunction!

2.8 Write the edited file back to the controller

2.8.1 Open file access

In the context menu, call up the following function in the Call context menu in the path Objects/Configuration/ConfigFiles/TcUaServerConfig.xml/Open:

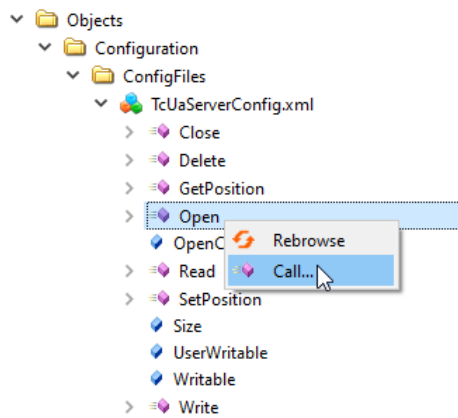


Fig. 20: Open file access

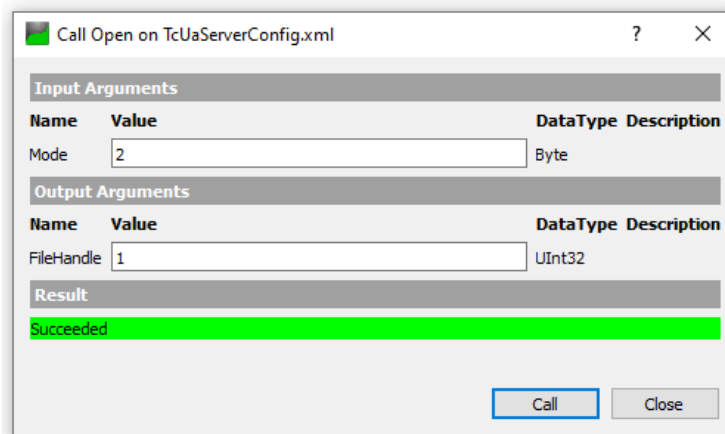


Fig. 21: Call Open

This function is used to open file access to the file.

- ▶ Open file access for reading.
- ▶ Mode: 2 Read
- ▶ File handle: DO NOT enter anything!
- ▶ Press Call



The program returns a file handle after the function has been executed.

- ▶ Remember this file handle for the next steps!

2.8.2 Write file

In the Call context menu, call up the following function in the Objects/Configuration / ConfigFiles/TcUaServerConfig.xml/Write path:

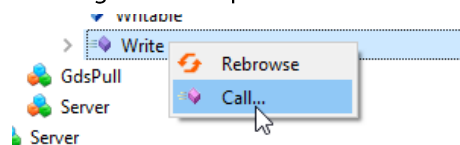


Fig. 22: Open Write

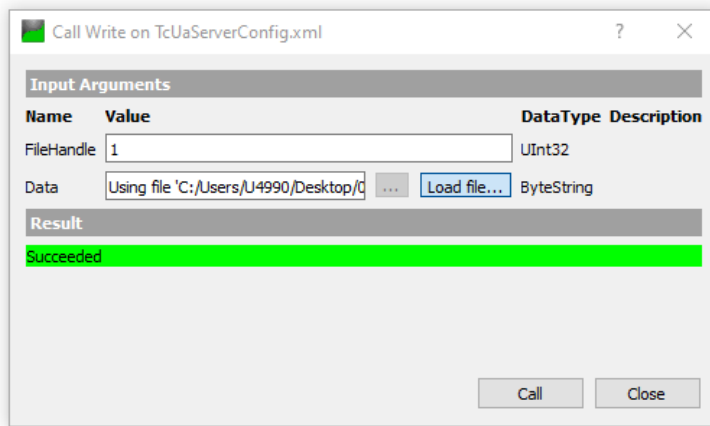


Fig. 23: Call Write

- ▶ File handle: Enter the data from the Open step.
- ▶ Data: Select the modified file from the storage path by clicking 'Load file'
- ▶ Press Call.

2.8.3 Close file

See chapter 2.7.3 Close file, on page 15.

2.9 Restart the OPC UA Server

To make the changes in the configuration file effective, the OPC UA server must be restarted. The myGEZE Control OPC UA server can be restarted remotely via the user account OPC. This restart does not restart the entire controller system. This does not result in functional outages. In the Objects/Configuration/Server/RestartServer path, call up the following function in the Call context menu:

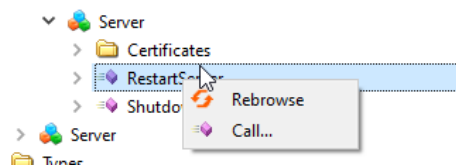


Fig. 24: Open Restart



Restarting the OPC UA server takes about 5 minutes. This depends on the other activities being carried out on the system.

3 Module types

Technical type	What	Max. possible data points
Server system	The OPC UA Server provides information items about general information; status, current time, namespace	-
TZ320	Emergency exit control, emergency exit system	16
DCU	Automatic drives for swing, sliding and revolving doors	17
DCU + TZ	Combination of automatic drives + emergency exit control	25
DOOR	Manual door systems	10
MBZ	Smoke and heat extraction systems type MBZ300 in different versions	30...y
IQBOX KNX	KNX Windowdrive	11
KNX Common	KNX general data	7
DI/DO	List of product-neutral inputs and outputs	1...z
HOLD	Image of a hold-open system with a combination of input and output signals	5

y = depending on the number of modules installed in the MBZ 300

z = number of inputs and outputs

3.1 Basic design of the object structures

The object structures of the OPC UA data result from the module types. This structure is always the same in the individual module types. The information read by a GEZE device is summarised in an overall structure. The writeable information is provided again separately as individual data.

Example for module type DCU

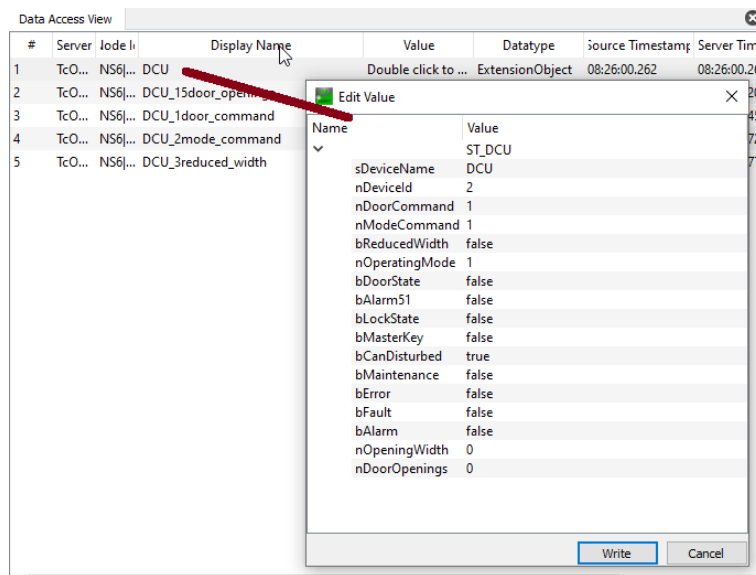


Fig. 25: Node set for reading data points.

Data Access View						
#	Server	Node Id	Display Name	Value	Datatype	Source Timestamp
1	TcO...	NS6 ...	DCU_15door_openings	0	UInt32	09:36:45.200
2	TcO...	NS6 ...	DCU_1door_command	1	UInt32	09:36:46.457
3	TcO...	NS6 ...	DCU_2mode_command	1	UInt32	09:36:47.721
4	TcO...	NS6 ...	DCU_3reduced_width	0	UInt32	09:36:48.778

Fig. 26: Individual points for write access

The respective data types are placed in front of the item designation (e.g. bDoorState == Boolean) or defined for individual items in the 'Data type' field. The meaning of the individual levels (values) is explained in the respective module type.

The name used for the structure is derived from the configuration in myGEZE Control. The name given there for the GEZE device is used as the structure name (display name).

The system allows the user to enter customer-specific designations at this point, such as plant identification keys (PIK).

Input options

Designation of the node set: 40 characters

Designation of individual points: 120 characters

The data is entered in the myGEZE Control Configurator in UTF-8 format.

Geräte ID	Typ	Name	Beschreibung
2	DCU	PFWR0009IWA1TUER10	PFWR9 Raum 00.911A Eingangstür

CAN Term: 1 CAN Adresse: 2

BACnet	Objektname	Beschreibung
☒	PFWR0009IWA1TUER10_1door_command	door command object
☒	PFWR0009IWA1TUER10_2mode_command	mode command
☒	PFWR0009IWA1TUER10_3reduced_width	reduced width
☒	PFWR0009IWA1TUER10_4operating_mode	operation state

Fig. 27: Inputs in the myGEZE Control Configurator

Designation

- 1 Node set name
- 2 Individual data point name

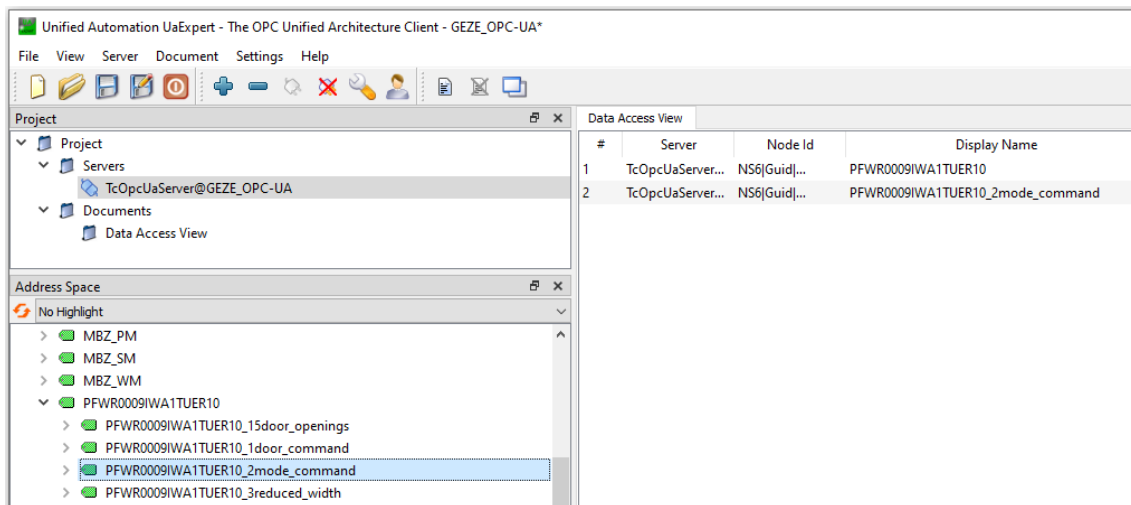


Fig. 28: Display of data in UA Expert

3.2 Open count

For each module type in which a product is opened, the openings/cycles are counted. This data information is always identical. It is available in the node set as readable information and can be overridden by OPC via the respective individual point. This is used to adjust the counted cycles, e.g. when replacing hardware.

Switch object DoorOpenings

OPC-Designation	Value range	Command	Explanation
nDoorOpenings	0 ... 999,999	Number of door openings	Range: 0... 999,999 cycles

4 Overview of module-specific data points

4.1 Server system

The server system offers the option of providing global functions for the entire device. This includes some system-specific objects and structures.

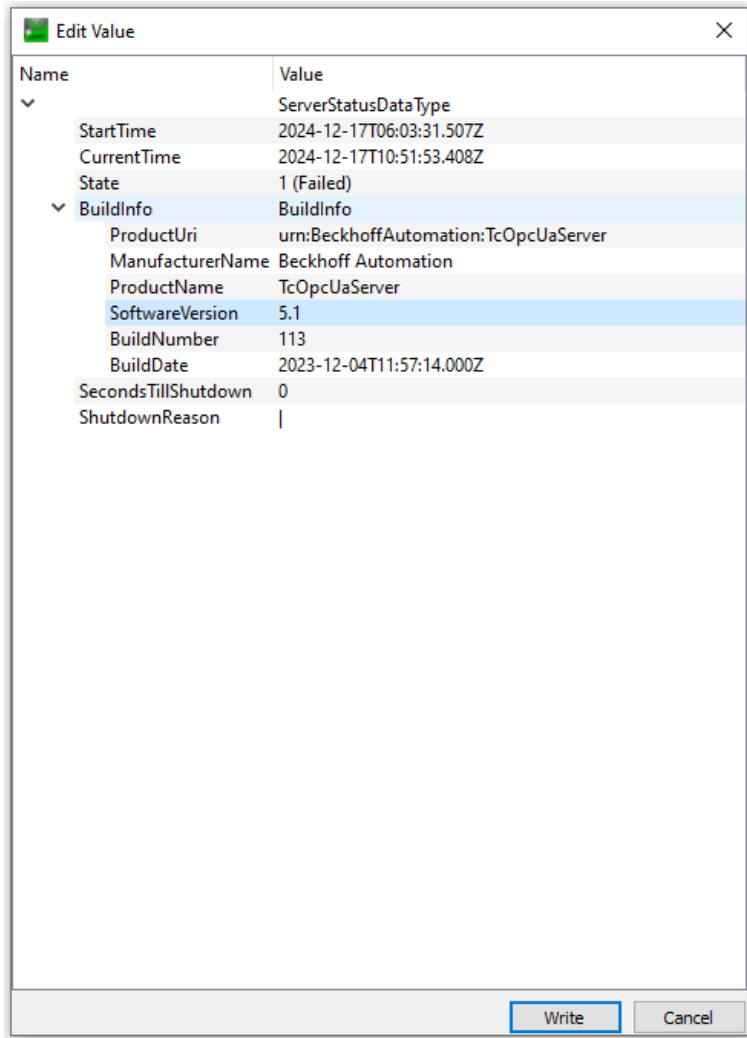


Fig. 29: Server system/status

4.2 TZ320

Possible devices

- ▶ Door control units TZ320, TZ321, TZ322
- ▶ Locking element (FTV320, MA500, FTÖ)
- ▶ Door terminal (T320)

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
nCommand	Command	Display of sent commands; see table for commands.
nOperating-Mode	Operating status	Display of operating statuses; see the following table
bDoorState	Door status	Feedback from the contact of the built-in locking element: closed/open
bLockState	Locking status	Bolt feedback from the contact of the built-in locking element: locked, unlocked.
bRelease	Release emergency push button	Activation of the red emergency push button directly on the system.
bEmergencyUnlock	Emergency unlocking	Emergency unlocking is unlocking the door via a fire alarm system or smoke and heat extraction system or via the GEZE bus.
bDoorAlarm	Door alarm	The door alarm is triggered if the door is not closed after the end of the pre-alarm time.
bSabotage	Sabotage contact TZ, TT, clamping box	The sabotage alarm is triggered if the housing of a system component is opened.
bCanDisrupted	CAN bus fault	Disrupted connection to myGEZE Control. Data point triggers if a CAN address is programmed, but there is no bus connection.
bRelayFault	Relay error	Relay error due to short circuit, sticking relay or reversed polarity.
bLockFault	Error on the locking element	Locking element unlocked or not locked after a specified activation.
bCommunicationFault	Communication disruption with the door terminal or clamping box	Connection between the door control unit-door terminal-clamping box components is disrupted.
nDoorOpenings	Count value number of door openings	Count of the transfer of door status from closed to open.
bFaultexternal	External fault	Display of the message from the configurable input 'External fault'

Operating statuses

The available operating statuses of the system are transmitted collectively as a multi-level data point via the node **nOperatingMode**. The listed operating statuses are represented by the step values.

Step	Operating statuses	Explanation
1	Unlocked	Unlocked by key operated button or remote command.
2	Unlocked timer	Unlocked by timer input signal.
3	Locked	Locked by key operated button or remote command.
4	Locked by burglar alarm system	Locked by input signal from a burglar alarm system.
5	Short-time release	Short-time release by key operated button or remote command. System is unlocked for the set time or until the end of access and then locks again automatically.
6	Service mode active	System is in service mode for configuration.
7	Alarm active	There is at least one alarm in the system; such as a door alarm, sabotage, release
8	Fault	System has a fault; e.g. locking error, defective fuse
9	Active security interlocking door system	Control unit is an active part of an interlocking door system
10	Passive interlocking door system	Control unit is a passive part of an interlocking door system
11	Interlocking door system occupied	Control unit currently bringing persons through an interlocking door system.

Switch object nCommand:

This is used to send commands to the system. OPC UA is activated by specifying the step value.

Step value	Command	Explanation
1	No command	After executing an activation, the data point automatically returns to this value.
2	Unlock	Sustained unlocking of the door control unit.
3	Lock	Sustained locking of the door control unit.
4	Short-time release	One-time short-time release according to the parameters set for hold-open in the door control unit.

Functionality

Activation, for instance on step value 2 for unlocking. The controller executes the command, successful execution is reported via the data point **Operating statuses in the node set**. The switching object goes back to a step value of 1.

4.3 DCU

Possible devices

- ▶ DCU1
 - ▶ Slimdrive (all)
- ▶ DCU2
 - ▶ Powerdrive
- ▶ DCU6
 - ▶ TSA325 NT
 - ▶ Revo.PRIME
- ▶ DCU8

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
nDoorCommand	Door command	Display of sent commands; see table for commands.
nModeCommand	Operating mode command	Display of sent commands; see table for commands.
bReducedWidth	Daylight savings time changeover command	Display of sent commands; see table for commands.
nOperating-Mode	Operating status	Display of operating statuses; see operating status table. Note: Only for DCU1.
bDoorState	Door status	Feedback from the contact of the built-in locking element: closed/open
bmotorbrake	Motor gear unit brake	Feedback from the motor brake for the locking mechanism of the door
bLockState	Locking status	Bolt feedback from the contact of the built-in locking element: locked, unlocked
bMasterKey	Mode of operation selection locked	Specification of a mode of operation selection is locked for this drive (only door type EMD).
bCanDisturbed	CAN bus fault	Disrupted connection to myGEZE Control. Data point triggers if a CAN address is programmed, but there is no bus connection.
bMaintenance	Maintenance	Evaluation of the maintenance-related fault codes transmitted by the drive.
bError	System fault	Evaluation of the fault codes transmitted by the drive. System faults that do not directly lead to a failure: display programme switch not connected, continuous activation
bFault	Technical fault	Analysis of fault codes transmitted by the drive: Technical faults that could lead to a failure.
bAlarm	Alarm	Analysis of fault codes transmitted by the drive: Direct hazard alerts (fire).
nOpeningWidth	Opening width	Display of the percentage opening widths.
nDoorOpenings	Count value number of door openings	Count of the transfer of door status from closed to open.

Operating statuses

The available system operating statuses are transmitted collectively as a multi-level data point via the node operating status **nOperatingMode**. The listed operating statuses are represented by the step values.

Step value	Operating statuses	Explanation
1	Automatic	Automatic mode: The connected sensors are active and the system opens and closes automatically.
2	Night mode	Night mode: The connected sensors are inactive. The system does not open and close automatically.
3	Exit only	The connected sensors on the inside of the door are active. The connected sensor on the outside of the door is inactive. Automated access is only possible in the direction Outside .
4	Hold open	System is continuously open.
5	Timer active	The mode of operation of the system is specified by a timer at one or more input contacts (NA, LS, AU, DO). The input is configured as the timer in this case.
6	Fire alarm active	There is a fire alarm. Reported by a corresponding input. Depending on the setting, the drive and door system are decoupled and the door closed via spring load.
7	DCU not initialised	The control unit of the drive is not configured. A technician is required to configure the system.
8	DCU disrupted	There is a defect or a fault on the control unit of the drive. A technician is required to correct the error.
9	Smoke alarm	There is a smoke alarm, reported by a built-in smoke switch control unit. Depending on the setting, the drive and door system are decoupled and the door closed via spring load.
10	Active security interlocking door system	Control unit is an active part of an interlocking door system
11	Passive interlocking door system	Control unit is a passive part of an interlocking door system
12	Interlocking door system occupied	Control unit currently bringing persons through an interlocking door system.
13	Drive switched out of operation	##

Note

Not all operating statuses are available on every door system. This is dependent on the system hardware design.

ModeCommand switch object

This is used to send commands to the system. OPC UA is activated by specifying the step value.

Step value	Command	Explanation
1	No command	After executing an activation, the data point automatically returns to this value.
2	Night mode	Night mode
3	Exit only	Exit only
4	Automatic	Automatic
3	Hold open	Hold open
4	Switch drive off	The drive is switched off. A door can be manually opened/closed, depending on the system version.

DoorCommand switch object

This can be used to send commands to the system to open it once. OPC UA is activated by specifying the step value.

Step value	Command	Explanation
1	Inactive	After executing an activation, the data point automatically returns to this value.
2	Door opening	Activation of contact type KB (contact authorised).

bReducedWidth switch object

This can be used to send commands to the system to switch to or from daylight savings time.

Step value	Command	Explanation
0	Summer mode	Complete opening width
1	Winter mode	Reduced opening width

4.4 DCU+TZ320

Possible devices

- ▶ Slimdrive EMD
- ▶ Slimdrive SL
- ▶ Powerturn
- ▶ TZ320, TZ321, TZ322

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number; used for technical addressing.
nDoorCommand	Door command	Display of sent commands.
nModeCommand	Operating mode command	Display of sent commands.
bReducedWidth	Daylight savings time changeover command	Display of sent commands.
nOperating-ModeDcu	DCU operating status	Display of operating statuses.
nOperating-ModeTz	Operating status TZ320	Display of operating statuses.
bDoorState	Door status	Feedback from the contact of the built-in locking element: closed/open
bmotorbrake	Motor gear unit brake	Feedback from the motor brake to the locking mechanism of the door. Note: Only for DCU1.
bLockState	Locking status	Bolt feedback from the contact of the built-in locking element: locked, unlocked
bMasterKeyDcu	Mode of operation selection locked	Specification of a mode of operation selection is locked for this drive (only door type EMD).
bReleaseTz	Activation/emergency stop	Actuation of the red emergency stop push button directly on the system.
bEmergencyUnlockTz	Emergency unlocking	Emergency unlocking is unlocking the door via a fire alarm system or smoke and heat extraction system or via the GEZE bus.
bDoorAlarmTz	Door alarm	The door alarm is triggered if the door is not closed after the pre-alarm time has elapsed.
bSabotageTz	Sabotage contact TZ, TT, clamping box	The sabotage alarm is triggered if the housing of a system component is opened.
bRelayFaultTz	Relay error	Relay error due to short circuit, sticking relay or reversed polarity.
bLockFaultTz	Error on the locking element	Locking element unlocked or not locked after a specified activation.
bCommunicationFaultTz	Communication disruption with the door terminal or clamping box	The connection between the door control unit, door terminal and clamping box components is faulty.

OPC- Designation	Message/data point	Explanation
bCanDis- turbed	CAN bus fault	Disrupted connection to myGEZE Control. This monitors the DCU and TZ320.
bMaintenanceDcu	Maintenance	Evaluation of the maintenance-related fault codes transmitted by the drive.
bErrorDcu	System fault	Evaluation of the fault codes transmitted by the drive: System faults that do not directly lead to a failure: display programme switch not connected, continuous activation
bFaultDcu	Technical fault	Analysis of fault codes transmitted by the drive: Technical faults that could lead to a failure.
bAlarmDcu	Alarm	Analysis of fault codes transmitted by the drive: Direct hazard alerts (fire).
nOpeningWidth	Opening width	Display of the percentage opening widths.
nDoorOpenings	Count value number of door openings	Count of the transfer of door status from closed to open.

Operating statuses

- The explanation of operating statuses is identical to the DCU type. See 4.3 DCU.
- The explanation of operating statuses is identical to the RWS type. See 4.2 TZ320.

Switch objects

- The commands are identical to the DCU type. See 4.3 DCU.

Messages and alarms are transmitted individually via several binary data points (BACnet object type: Binary Value). Each entry in the table corresponds to one data point.

4.5 Door

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
nDoorCommand	Door command	Display of sent commands.
bDoorState	Door status	Feedback from the contact of the built-in locking element: closed/open
bLockState	Locking status	Bolt feedback from the contact of the built-in locking element: locked, unlocked
bDoorAlarmTz	Door alarm	The door alarm is triggered if the door is not closed after the end of the pre-alarm time.
nDoorOpenings	Count value number of door openings	Count of the transfer of door status from closed to open.
nDuration-ShortTimeRelease	Short-time release duration	Range: 0...200 sec
nAlarmDelay	Alarm delay	Range: 30...300 sec
nTargetState	Internal status of the output signal	Display of the internal setpoint state of the switching state. Steps correspond to the door command. While the door command returns to the value '1' after execution, this data point remains in the last commanded state.

Command switch object

This can be used to send commands for an opening to the system.

Step value	Command	Explanation
1	No command	After executing an activation, the data point automatically returns to this value.
2	Unlock	Sustained unlocking of the door control unit.
3	Lock	Sustained locking of the door control unit.
4	Short-time release	One-time short-time release according to the parameters set for hold-open in the door control unit.

DurationShortTimeRelease switch object

This can be used to send the time for the opening command KZF to the system.

Value	Command	Explanation
0	Short-time release duration	Range: 20...200 sec

AlarmDelay switch object

This can be used to send the time until the release of an alarm to the system.

Value	Command	Explanation
0	Alarm delay	Range: 30...300 sec

4.6 MBZ

A modular MBZ consists of different internal functional modules. These can be installed multiple times in some cases. To reflect this modular design, the type MBZ is divided into different modules:

MBZ.PM	MBZ300 Power module
MBZ.CM	MBZ300 Control module
MBZ.SM	MBZ300 Control module for other fire sections
MBZ.DM	MBZ300 drive module for connecting drives
MBZ.WM	MBZ300 weather module

4.6.1 MBZ.PM

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
bBatteryOperation	Battery operation	Indicates that the system is running on battery power. Supply voltage is not present.
bBattCheck	Battery test	Battery test in progress
bSystemVoltageFault	System voltage fault	Error in the internal system voltage.
bBatteryFault	Battery error	Battery error.

4.6.2 MBZ.CM/SM

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
bShevAlarmState	Smoke alarm	Release of a smoke detector connected to the module.
bDetector1	Triggering detector 1	
bDetector2	Triggering detector 2	
bAlarmButtonActive	Triggering alarm button	Release of a SHEV button connected to the module.
bLineFault	Fault detection line	The signalling lines on the module are actively monitored.
bSystemFault	System fault	If a line is interrupted, a notification is output here.
bMessagingRelay	Signalling relay triggered	
bConfigurationFault	Configuration error	A signalling relay can be used to provide an outstanding alarm as a potential-free contact for other systems.
bCanDisturbed	CAN bus fault	Disrupted connection to myGEZE Control. Data point triggers if a CAN address is programmed, but there is no bus connection.

4.6.3 MBZ.DM

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
nWindowCommand	Command	Display of sent commands; see table for the command WindowCommand.
nWindowState	Window status	Reports the current status of the window: 1 = stopped 2 = open 3 = closed 4 = closing 5 = alarm
bShevAlarmState	Smoke alarm	Release of a smoke detector connected to the module.
bDriveModuleFault	Drive module fault	The connection to the connected drive is actively monitored.
nWindowOpenings	Number of window openings	If the module detects an interruption, a message is displayed.
blInput1	Configurable input 1	Transfer of data information from free input 1 on the drive module
blInput2	Configurable input 2	Transfer of data information from free input 2 on the drive module

WindowCommand switch object:

Step value	Command	Explanation
1	No command	After executing an activation, the data point automatically returns to this value.
2	Open	Drive moves in the opening direction.
3	Close	Drive moves in the closing direction.
4	Stop	Drive stops

4.6.4 MBZ.WM

Node set structure

OPC- Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
bWind	Wind alarm	The module evaluates the wind sensor connected to the input. If the set limit value is exceeded, a notification is output here.
bRain	Rain alarm	The connected rain sensor detects precipitation.

4.7 IQBOX KNX

Possible devices

- ▶ GEZE IQ window drives over IQ Box KNX
 - ▶ Slimchain
 - ▶ Powerchain
 - ▶ F1200+
 - ▶ Locking system

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
nWindowCommandPosition	Target position	Specification for the desired opening of the drive, as a percentage of the max. possible stroke.
bWindowLock1	Block activation	Drive is blocked for activation to command position.
nWindowSpeedNext-Drive	Speed	Specification for the desired speed of the drive, as a percentage of the max. possible speed.
nWindowActualPosition	Current position	Display of the current position of the drive, as a percentage of the max. possible stroke.
bWindowClosed	Closed	Drive reports closed.
bWindowOpen	open	Drive reports open.
bServiceCheckUnit	Drive maintenance	Drive reports maintenance.
bServiceErrorUnit	Drive fault	Drive reports a fault.
bWindowLockAuto	Automatic block	Drive is blocked for automatic functions from KNX; e.g. a KNX group address would write directly to the command

WindowCommandPosition switch object:

Department	Command	Explanation
0...100%	Target position	Specification for the desired opening of the drive, as a percentage of the max. possible stroke.

WindowSpeedNextDrive switch object:

Department	Command	Explanation
0...100%	Speed	Specification for the desired speed of the drive, as a percentage of the max. possible speed.

WindowLock1 and WindowLockAuto switch object:

Step value	Command	Explanation
0	Release	The drive is released.
1	Block	The drive is blocked.

4.8 KNX Common

If the KNX interface of the control unit system and therefore of GEZE IQ window drives is connected to the overall KNX system of the building, then control notifications from the KNX system can be used for the window. These global data points can be integrated into myGEZE Control.

Node set structure

OPC-Designation	Message/data point	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	internal device number	Internal number used for technical addressing.
bAlertSafety	Alarm - Safety	KNX system reports a general data point safety.
nAlertWindSpeed	Alarm value wind speed	KNX transfers the set threshold for triggering a wind alarm.
bAlertWind	Alarm - Wind	KNX reports a wind alarm.
bAlertRain	Alarm - Rain	KNX reports a rain alarm.

4.9 DI/DO

The controller system can connect non-network-compatible devices via digital input and output terminals, and the resulting information is mapped onto data points. The designation/function is determined from the connected device.

Examples

- ▶ EC Turn
- ▶ TSA 160
- ▶ Staircase control panel
- ▶ Hold-open systems
- ▶ IQ lock
- ▶ 24VDC signals (such as a reed contact for the door notification)
- ▶ Third-party products from other competitors

Digital input data point

Node set structure

OPC-Designation	Step value	Value	Explanation
sDeviceName	Structure name		Name of the node set.
nDeviceId	internal device number		Internal number used for technical addressing.
bUniversalDi	false/true	Off/On	For instance report of a smoke alarm of hold-open system

Digital output data point

Node set structure

OPC-Designation	Step value	Value	Explanation
sDeviceName	Structure name		Name of the node set.
nDeviceId	Internal device number		Internal number used for technical addressing.
bUniversalDo	false/true	Off/On	For example Activation for the release of a hold-open system.
nTrigger		0...200 sec	From template version 3.0 onwards, a time for a trigger pulse can be specified for activation of the output. This causes the output to be automatically pulsed and reset once the time has elapsed.

bUniversalDo switch object:

Step value	Command	Explanation
False	Off	
True.	On	For example Activation for the release of a hold-open system.

bUniversalDo switch object:

Step value	Command	Explanation
0	Permanent activation; no trigger	
1 ... 200 sec	Duration of trigger pulse	

4.10 HOLD hold-open system

The controller system can connect non-bus-capable devices via digital input and output terminals. The resulting information for a hold-open system is summarised via the HOLD module type.

HOLD module type is available from template version 2.0.

Node set structure

OPC-Designation	Operating statuses	Explanation
sDeviceName	Structure name	Name of the node set.
nDeviceId	Internal device number	Internal number used for technical addressing.
	Close	A pulse is generated at the digital output, which triggers the door to close. The pulse interrupts the power supply to the built-in hold-open element and the door is closed via the mechanical door closer.
bState	false/true	Door status: closed/open
bAlarm	Alarm	Triggering of the smoke switch control unit Inactive/Alarm

nCommand switch object

Step value	Command	Explanation
1	No command	After executing an activation, the data point automatically returns to this value.
2	Close	A pulse is generated at the digital output, which triggers the door to close. The pulse interrupts the power supply to the built-in hold-open element and the door is closed via the mechanical door closer.

5 Compatible products

To connect to the myGEZE Control system, the product systems must fulfil minimum hardware and firmware requirements. The minimum requirements are listed in the myGEZE Control user manual.



For more information, see chapter 1.2 Reference documents, page 4.

6 List of figures

Fig. 1: Sample graphic UA Expert.....	6
Fig. 2: Establishing a connection.....	8
Fig. 3: OPC UA data.....	9
Fig. 4: GdsPull	9
Fig. 5: Call Register.....	10
Fig. 6: Call Register on GdsPull.....	10
Fig. 7: Call Unregister.....	11
Fig. 8: Call Unregister on GdsPull.....	11
Fig. 9: Call SetUpdateStrategy.....	12
Fig. 10: Call SetUpdateStrategy on GdsPull.....	12
Fig. 11: Call Update.....	13
Fig. 12: Call Update on GdsPull.....	13
Fig. 13: Open file access.....	14
Fig. 14: Call Open.....	14
Fig. 15: Open Read.....	15
Fig. 16: Call Read.....	15
Fig. 17: Open Close.....	15
Fig. 18: Call Close.....	16
Fig. 19: XML illustration.....	17
Fig. 20: Open file access.....	17
Fig. 21: Call Open.....	18
Fig. 22: Open Write.....	18
Fig. 23: Call Write.....	19
Fig. 24: Open Restart.....	19
Fig. 25: Node set for reading data points.....	21
Fig. 26: Individual points for write access.....	21
Fig. 27: Inputs in the myGEZE Control Configurator.....	22
Fig. 28: Display of data in UA Expert.....	22
Fig. 29: Server system/status	23

GEZE GmbH

Reinhold-Vöster-Straße 21–29
71229 Leonberg
Germany

Tel.: 0049 7152 203 0

Fax: 0049 7152 203 310

info@GEZE.com · www.GEZE.com

