

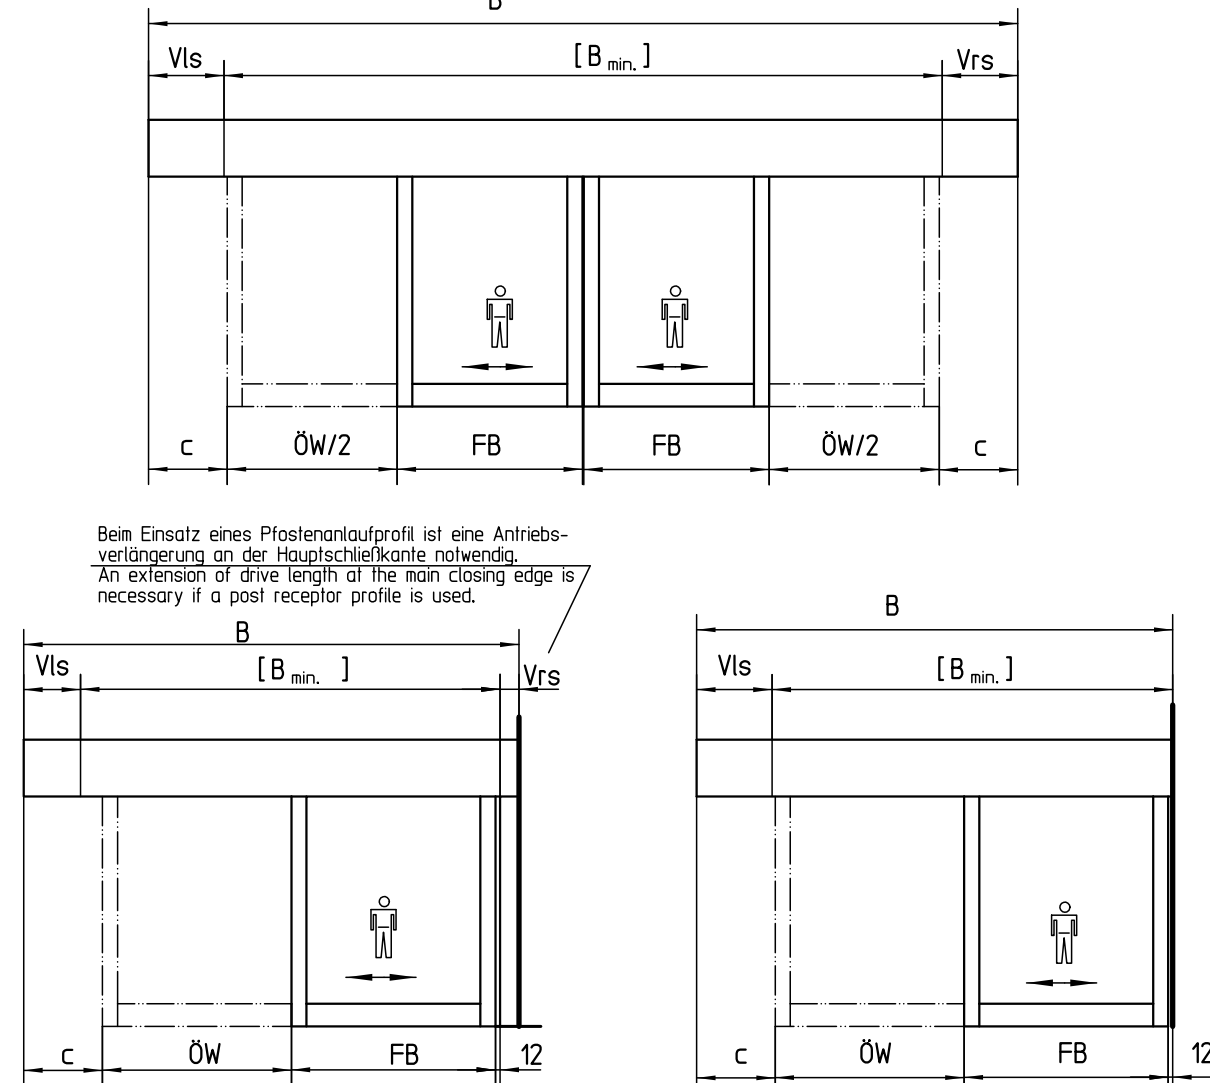

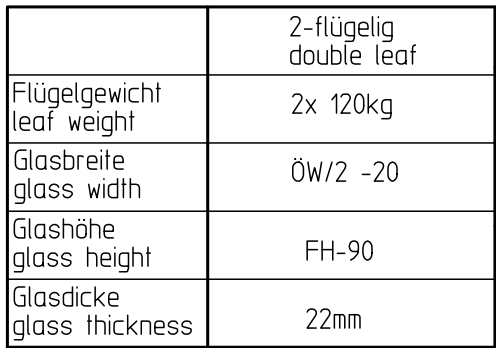


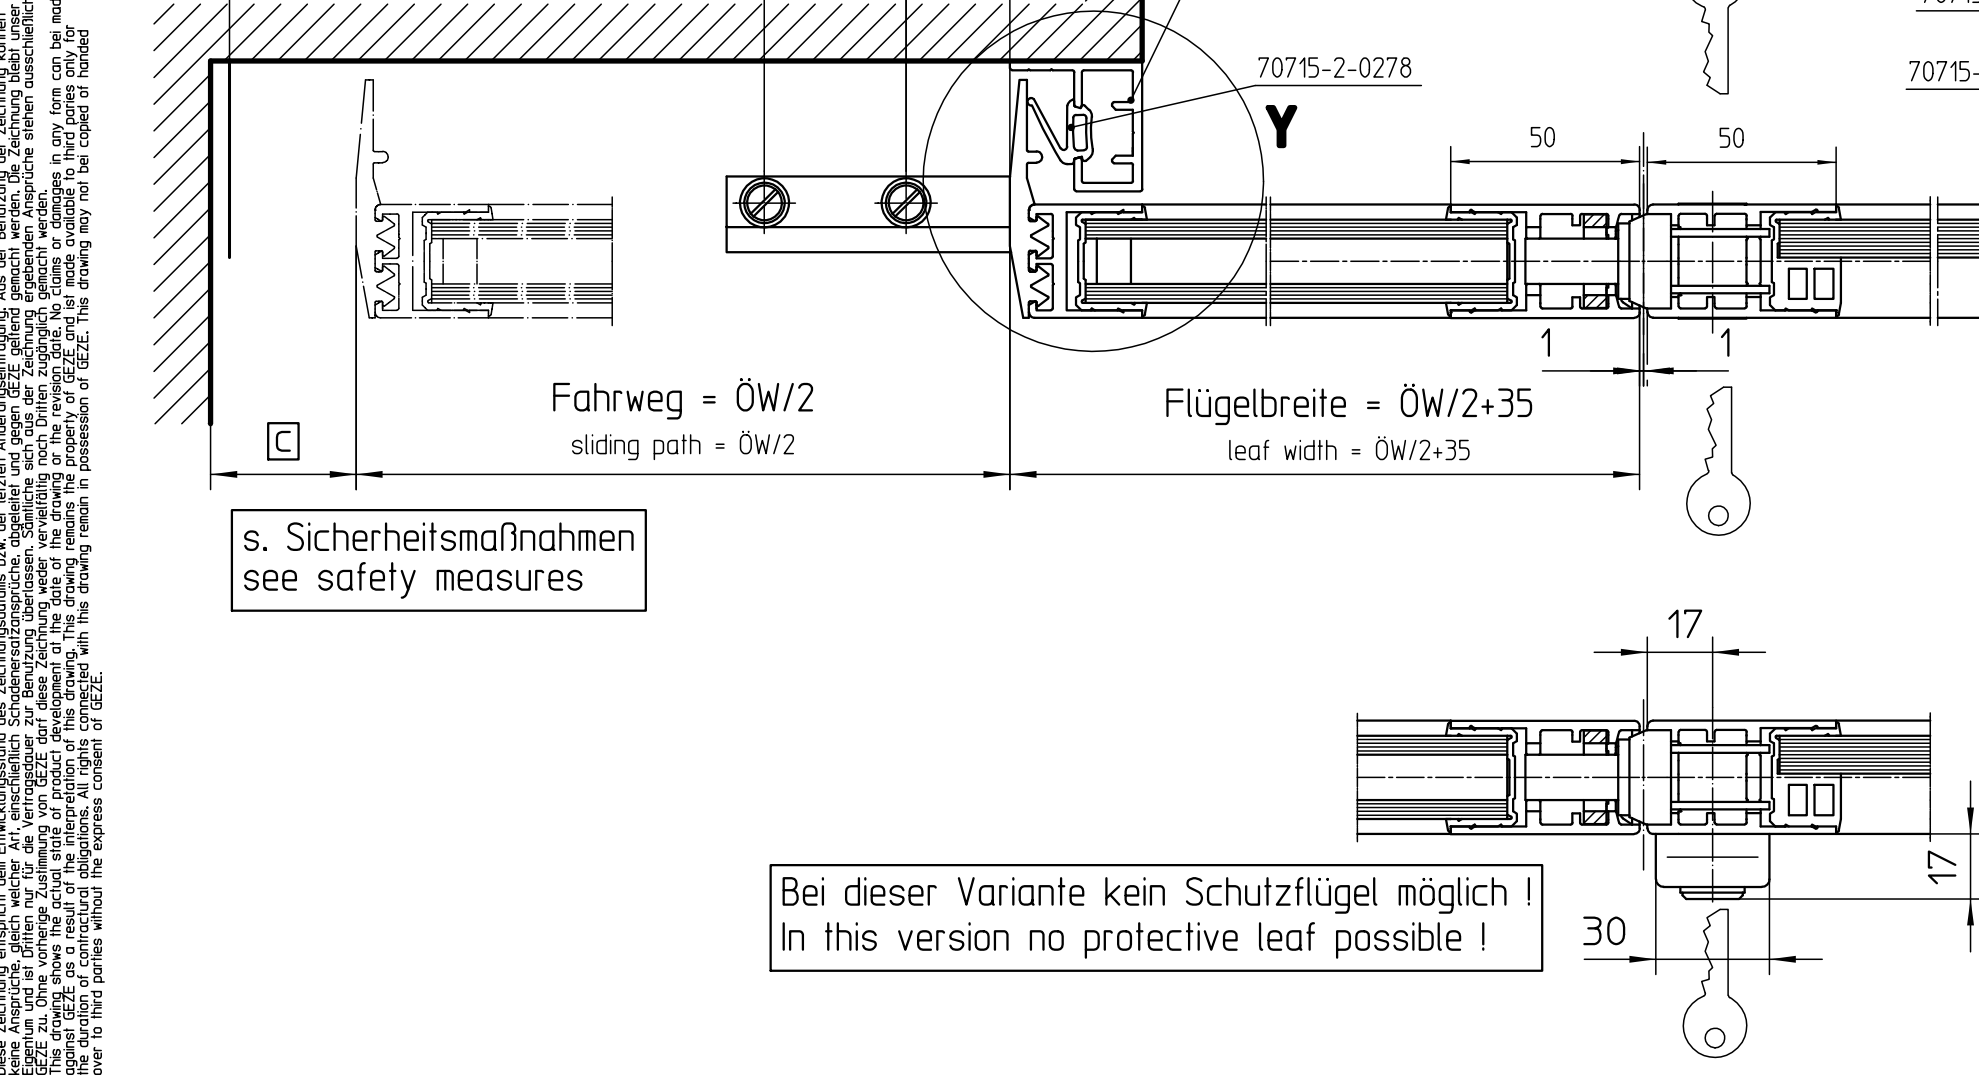

Gefahrenpunkte / danger points	Sicherheitsmaßnahme / safety measures
--------------------------------	---------------------------------------

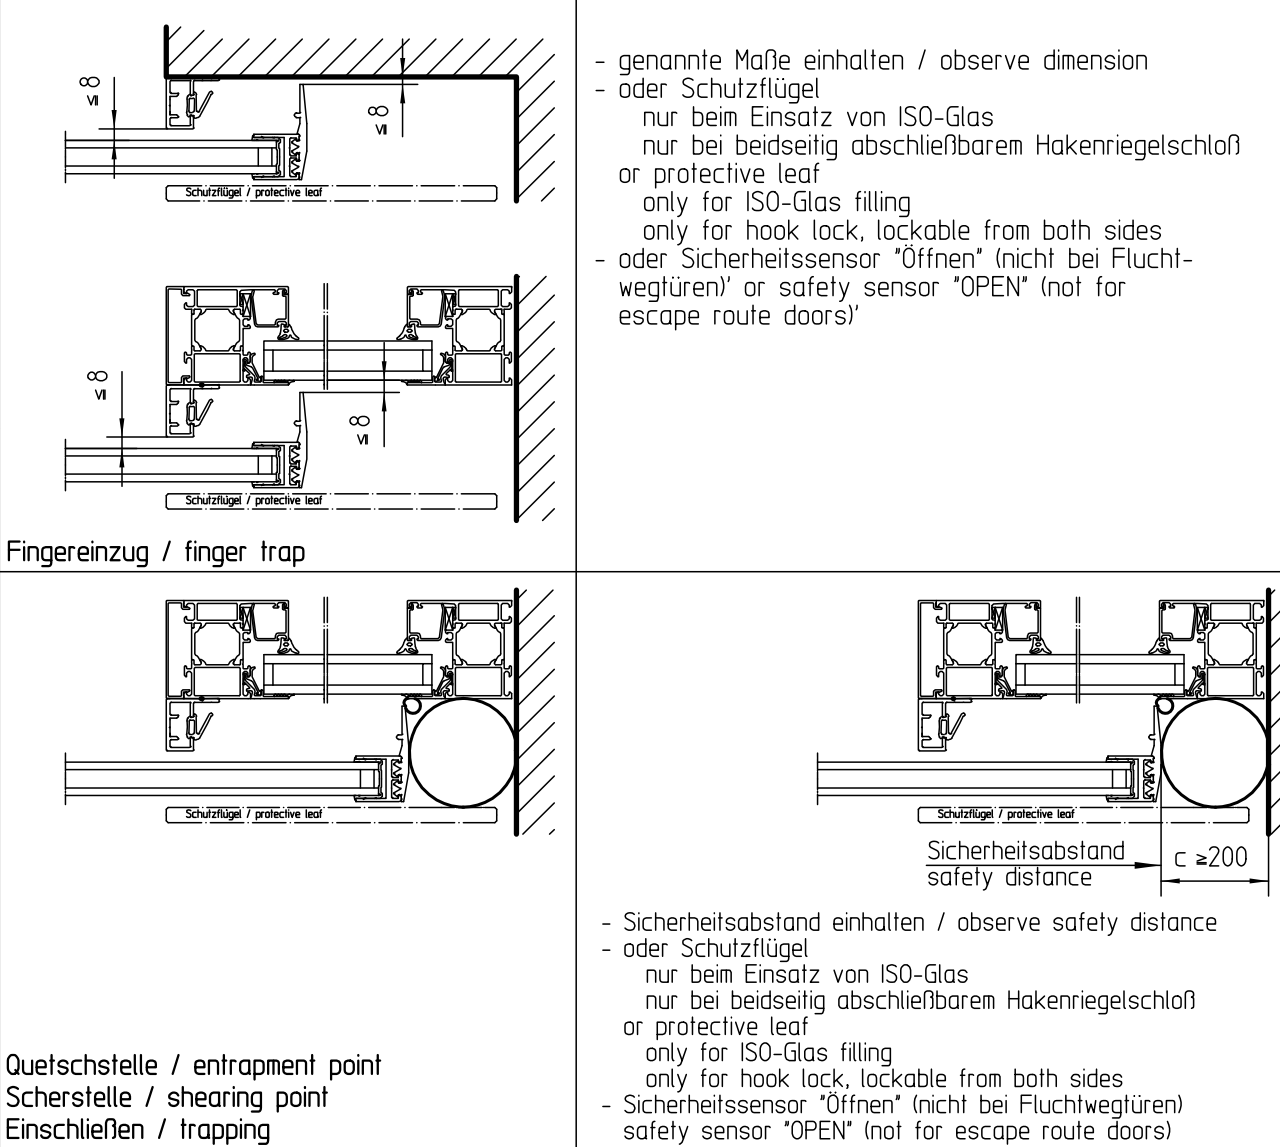

Sicherheitsmaßnahmen sind auch anzuwenden wenn sich im Öffnungszyklus ein Pfosten befindet.
Also observe safety measures if there is a post within the opening cycle.

Namen und gesetzliche Vorschriften:

Gem. der EU-Maschinenrichtlinie 2006/42/EG muß eine Sicherheitsanalyse (Gefahrenanalyse) für die Türanlage durchgeführt werden. Neben Informationen dazu auf www.geze.de.

Montage- und Serviceanleitung sowie die Übrigen Produktunterlagen PowerDrive Pul-/FR sind zu beachten.

Für die Baugruppe Deutschland gilt zusätzlich:

BK9322, Richtlinien für kräftigstele Fenster, Türen und Tore

Für Pul-/FR-Sicherheits-Richtlinie für aut. Schieberen in Refuzungen

gesetzliche Bestimmungen und weiterführende Normen

Üf andere Länder sind die jeweils geltenden Vorschriften einzuhalten.

Anwendungsschritte:

Bei der Gebäudefundamentierung sind die statischen und dynamischen Kräfte der Schieber zu berücksichtigen. Die Anwendungsvorschriften der Hersteller Seite sind einzuhalten.

Festsetzungen sind ggf. durch bauseitige Statistiken zu verstärken.

Dargestellte Vergütung von Flügeln und Seitenteilen ist einzuhalten, anderfalls können Quetsch-, Scheer- oder Zugschäden auftreten. Nach dem Einbau der Schieberanlage ist die Verbindung zwischen Stützprofil und Fensterrahmen, bei nicht Wandmontage, muss bauseits statt ausgeführt werden.

Standards and legal regulations

In accordance § 9 Machine Directive 2006/42/EC, a safety analysis (danger analysis) must be accomplished. For further information see [www.din.de](#).

The lifting and service instructions as well as the other product documents Powerdrive PL-FR must be observed, or the Federal Republic of Germany, in particular:

- BGR 232 "Guidelines for power-operated windows, doors and gates"
- For PL-FR: AÜSchrB "Directive for automatic windows, doors and gates"
- further legal regulations and standards
- guidelines for application.

During construction and operation, observe the static and dynamic forces of the sliding door system. All application instruction of the system profile manufacturer must be followed.

Reinforce the facade profiles with steel profiles if needed (see chapter 8).

Observe the strong glazing of leaves and side panels; otherwise a finger trap or a shearing point could occur, see also the safety analysis.

Be particularly careful when controlling power and drive unit, if no wall fastening must be executed solid by others.

[illegible]